


Assembly Instructions

for Müller Light and Ventilation Ridge „Deluxe Cavallo“

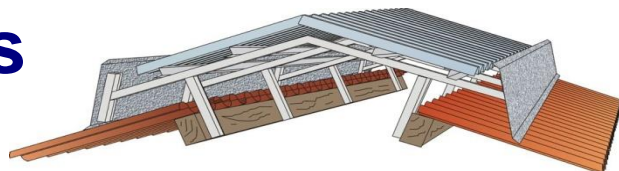

Important notes!

Bearing loads of Müller Light and Ventilation Ridge must be considered in the design of the removed purlins! If a ventilation control (ventilation flaps) is to be incorporated into the ridge, it is recommended to first read and execute the "Installation Instructions for ventilation control MLL"!

Preface

The correct and technically perfect use of the products and compliance with the applicable accident prevention regulations during installation are not subject to our control.

In conformity with these installation instructions a smooth and quick mounting, nothing is to prevent. We hope you will enjoy the **Mueller Light and Ventilation Ridge „Deluxe Cavallo“** now and as well in the future.

Storage (Please pay attention to the instructions immediately after delivery!)

Upon receipt of the construction kit, the stacked, bare aluminium profiles (wind deflectors, purlins and frame) should be immediately separated. Moisture between the stacked sections and profiles due to rain, humidity or condensation could otherwise cause an unsightly discolouration (corrosion of aluminium, "Brunnenschwärze") of the parts.


Never expose the light panels / domes in the stack to direct sunlight or excessive heat – heat accumulation – burning glass effect. This may lead to deformations!

For intermediate storage or provision on the site, all parts should be covered with an opaque material to protect against moisture as well as against wind and storm. Packaging ex factory serves as protection during the transport and is not suitable for storage.

The storage for an extended period should be carried out "under roof".

Assembly

1. Erstes Fasten the first and last pair of aluminium supports with either two stainless steel drill screws 6.5 x 65 mm (MLL 60 to 250) or with three stainless steel drill screws (MLL 300 to 400) with the timber purlins so that the supports protrude 115 mm beyond the existing roof cover (see picture). If your roofing has a profile height of more than 6 cm or ridge purlins less than 14 cm in height, please consult with us prior to installation.

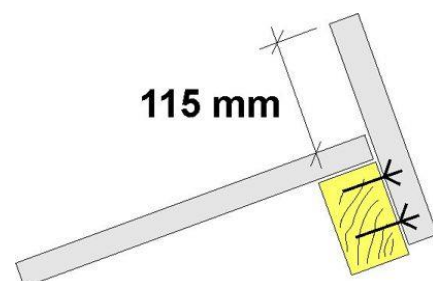


2. Stretch a cord and align the other supports and also fasten them with two resp. three drill screws. The support spacing for the »Deluxe Agrar Type Hall« **MLL 60 to 200 is 1440 mm** (center to center supports) or **960 mm for the MLL 225 to 400**. The spacing is necessary to be observed.


If you want a small lateral protrusion of the light dome, the support spacing of the first and last section has to be reduced accordingly (max. 100 mm protrusion).

3. Now position the welded aluminum frame, also aligned them by means of a cord and attach to each aluminium support with two stainless steel drill screws SX5 .

4. Now the diagonal support is attached and fixed to both the support and the frame with two SX5 drill screws (see sketch).

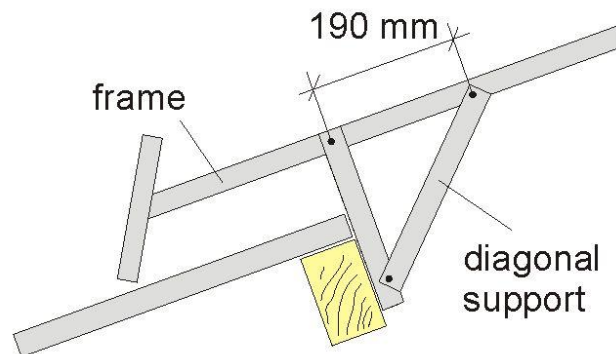

5. Put Al-Z-Pfetten Al-Z-purlins on the frame, according to sketch, and fix each support with two SX5 drill screws. The overlap of the purlins is 120 mm and is located exactly on a frame. Pay attention to the correct size of ridge and the number of the row of purlins per side.

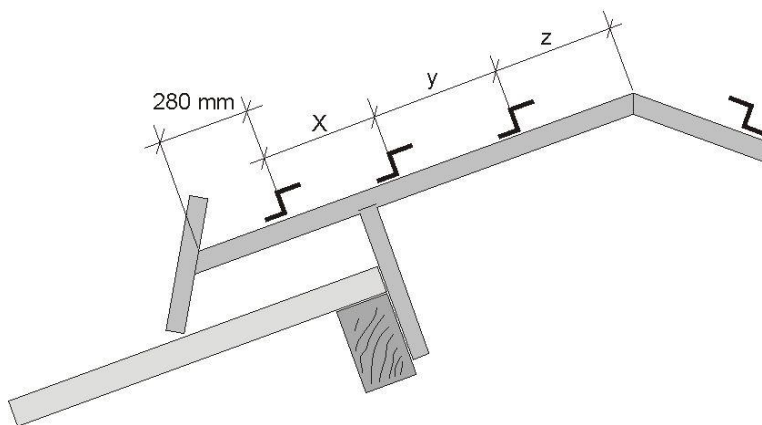

Deluxe Cavallo 60 to 110

one z-purlin at each side (280 mm to wind deflector)

Deluxe Cavallo 120 to 225



two z-purlin at each side (*distance w = z*)

Deluxe Cavallo 250 to 400

three z-purlin at each side (*distance x = y = z*)

6. The domes have a lateral overlap of 5 cm (see sketch). This results in a coverage width of 1040 mm per dome.

Place the domes and attach them to all Z-purlins in each second lower flange with SX5 stainless steel drill screws.

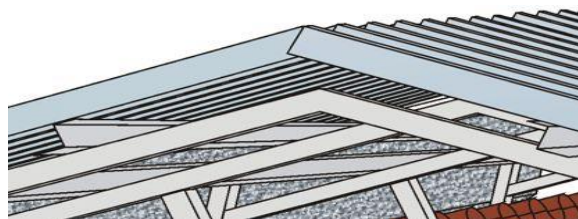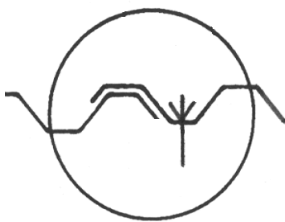

7. Put Al trim corners on the holding device of the wind deflectors, then align the Al wind deflectors (reinforcing bead down) and attach each with 2 SX5 drill screws per bracket. Attach the upper drill screw at a level, so that the trim corner is mounted simultaneously. The overlap of the trim corners and the wind deflectors is 120 mm, alike the purlins, and is located exactly on a holding device of the wind deflector. Finally, the wind deflectors are each attached with a screw exactly between the frames at the trim corner in order to avoid noise due to the wind.

